Feather-Fur™ PS Lightweight *Peel & Stick* Furring Strips

Installation Instructions

Inspection of Wall Conditions and Weather Barrier/Building Wrap
Ensure that the wall is free from structural defects, any membranes or flashing are properly installed, and that the final system will have a path for moisture to escape from the wall. Keene Building Products' Feather Fur should only be applied to structurally sound surfaces, which incorporate good building practices, and meet all local code requirements. Before starting any applications, check with your local building code requirements and read all manufacturers' installation instructions.

1. **Install building paper or WRB* and flashing according to manufacturers' recommendations.**
2. **Installations over ½" OSB or plywood intended for wood or cement cladding.** Place Feather Fur over building paper or WRB* aligning with the wall stubs at 16" on center. Place against the building paper and WRB*. Peel off the release liner and stick onto the WRB aligning with the wall studs. FUR AS YOU GO. Only apply enough Feather Fur that will be covered by siding in that day. The siding will be what permanently holds it.

   Installations over 1" insulation and ½" OSB or plywood intended for wood or cement cladding. place Feather Fur over building paper or WRB* aligning with the wall stubs at 16" on center. Place against the building paper and WRB*. Peel release liner and secure Feather Fur in place at 16" on center or similar.

Windows & Trim

1. Secure additional Feather Fur behind corner trim, and vertical window trim. Attach Feather Fur 1" away from window frame for air and water channel behind trim.
2. Place Feather Fur along both the top and bottom length of the window. Feather Fur will act as a screen to provide venting and deter possible insects or wind driven debris.
3. Trim windows and doors as specified by manufacturer.

Base of Wall

1. Run Feather Fur horizontally at the base of wall. Feather Fur will act as a screen to provide venting and deter possible insects or wind driven debris.
2. When applying lap siding, place a second Feather Fur over the first. This second layer is a furring layer to give the siding proper slope for the bottom course. Siding should overlap the entire base assembly by ½".

Top of Wall

1. Run Feather Fur horizontally at the top of wall. Feather Fur will act as a screen to provide venting and deter possible insects or wind driven debris.

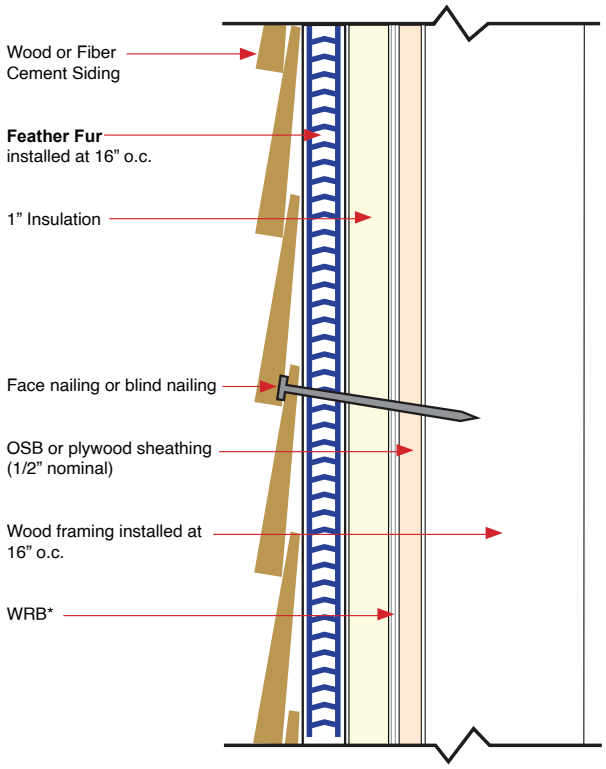

KBP_FeatherFurPS_ 679335_0325